
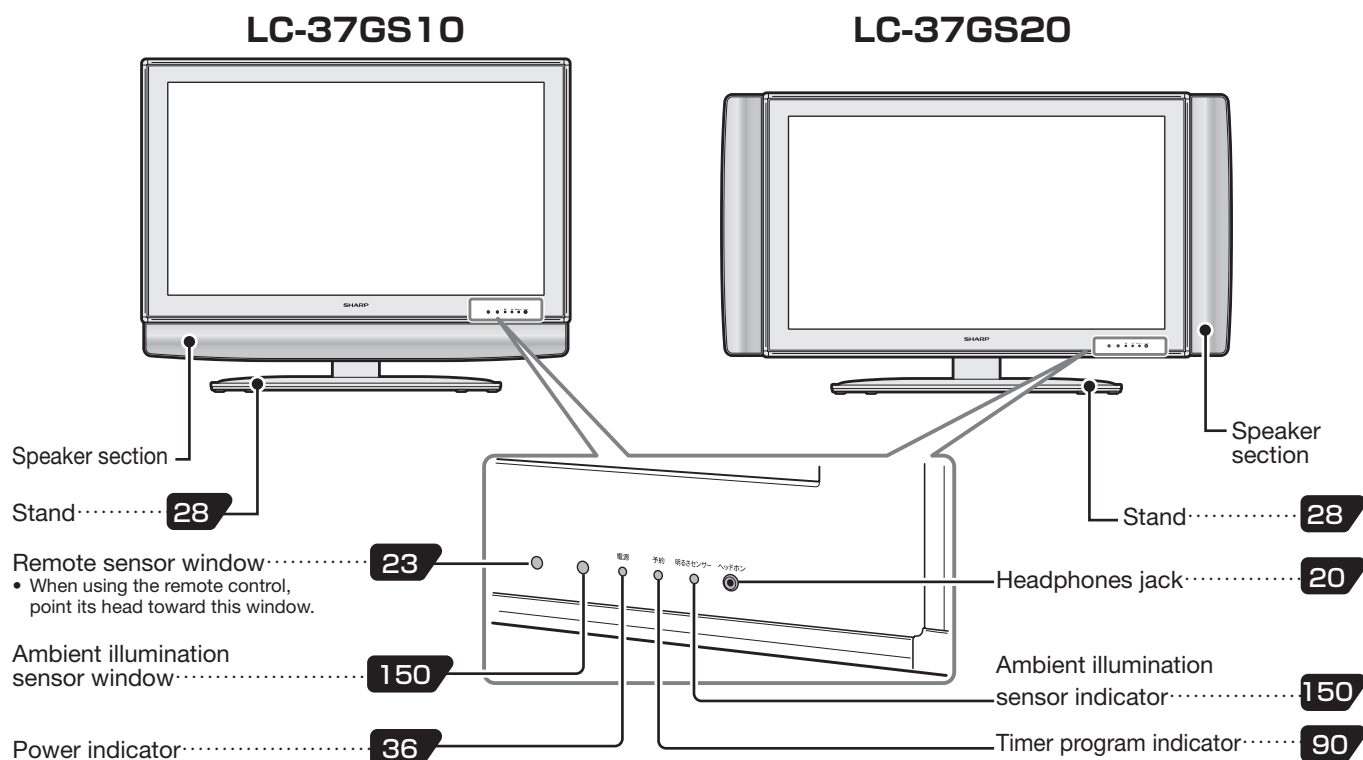



# Part Names – Main Unit

■ The number shown in each  is the page number where the part's function and/or use are explained either in English or Japanese.

## Front view




## Top view

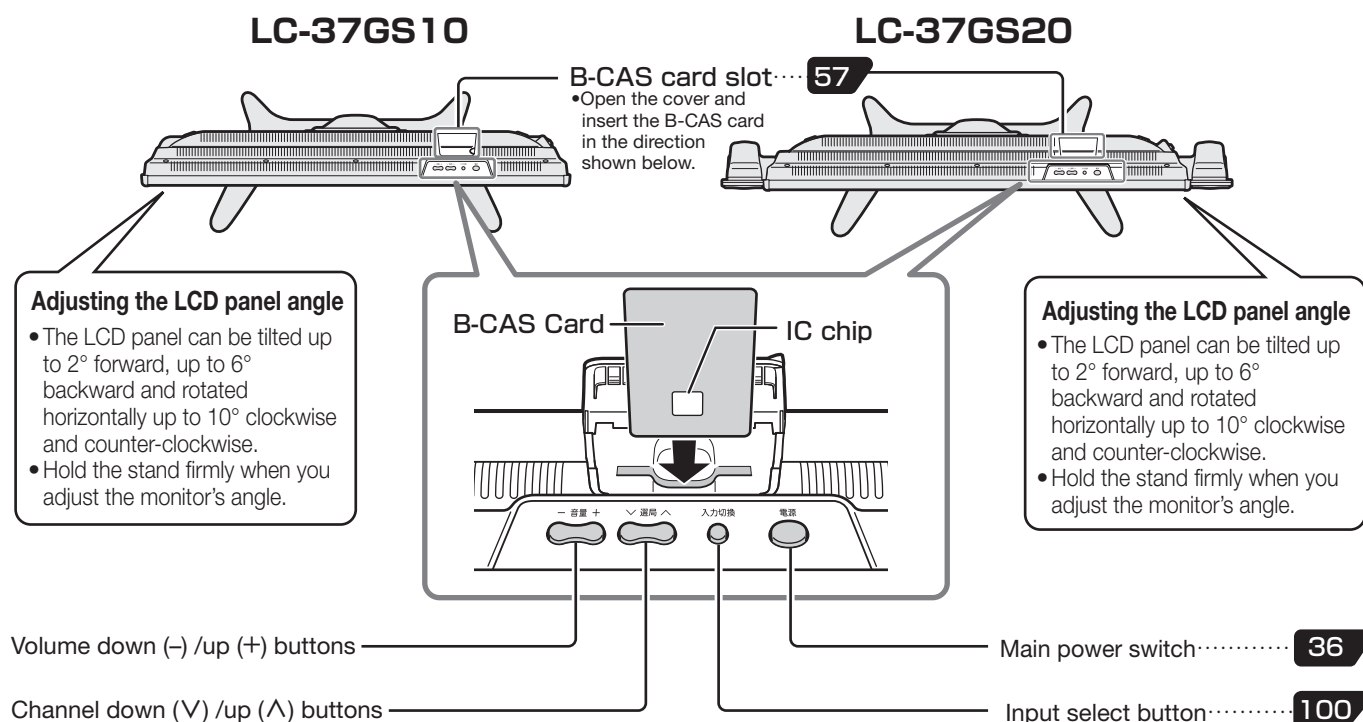


## Rear view


The illustrations below are those of LC-37GS10. LC-37GS20 has the same layout of jacks and terminals as LC-37GS10.

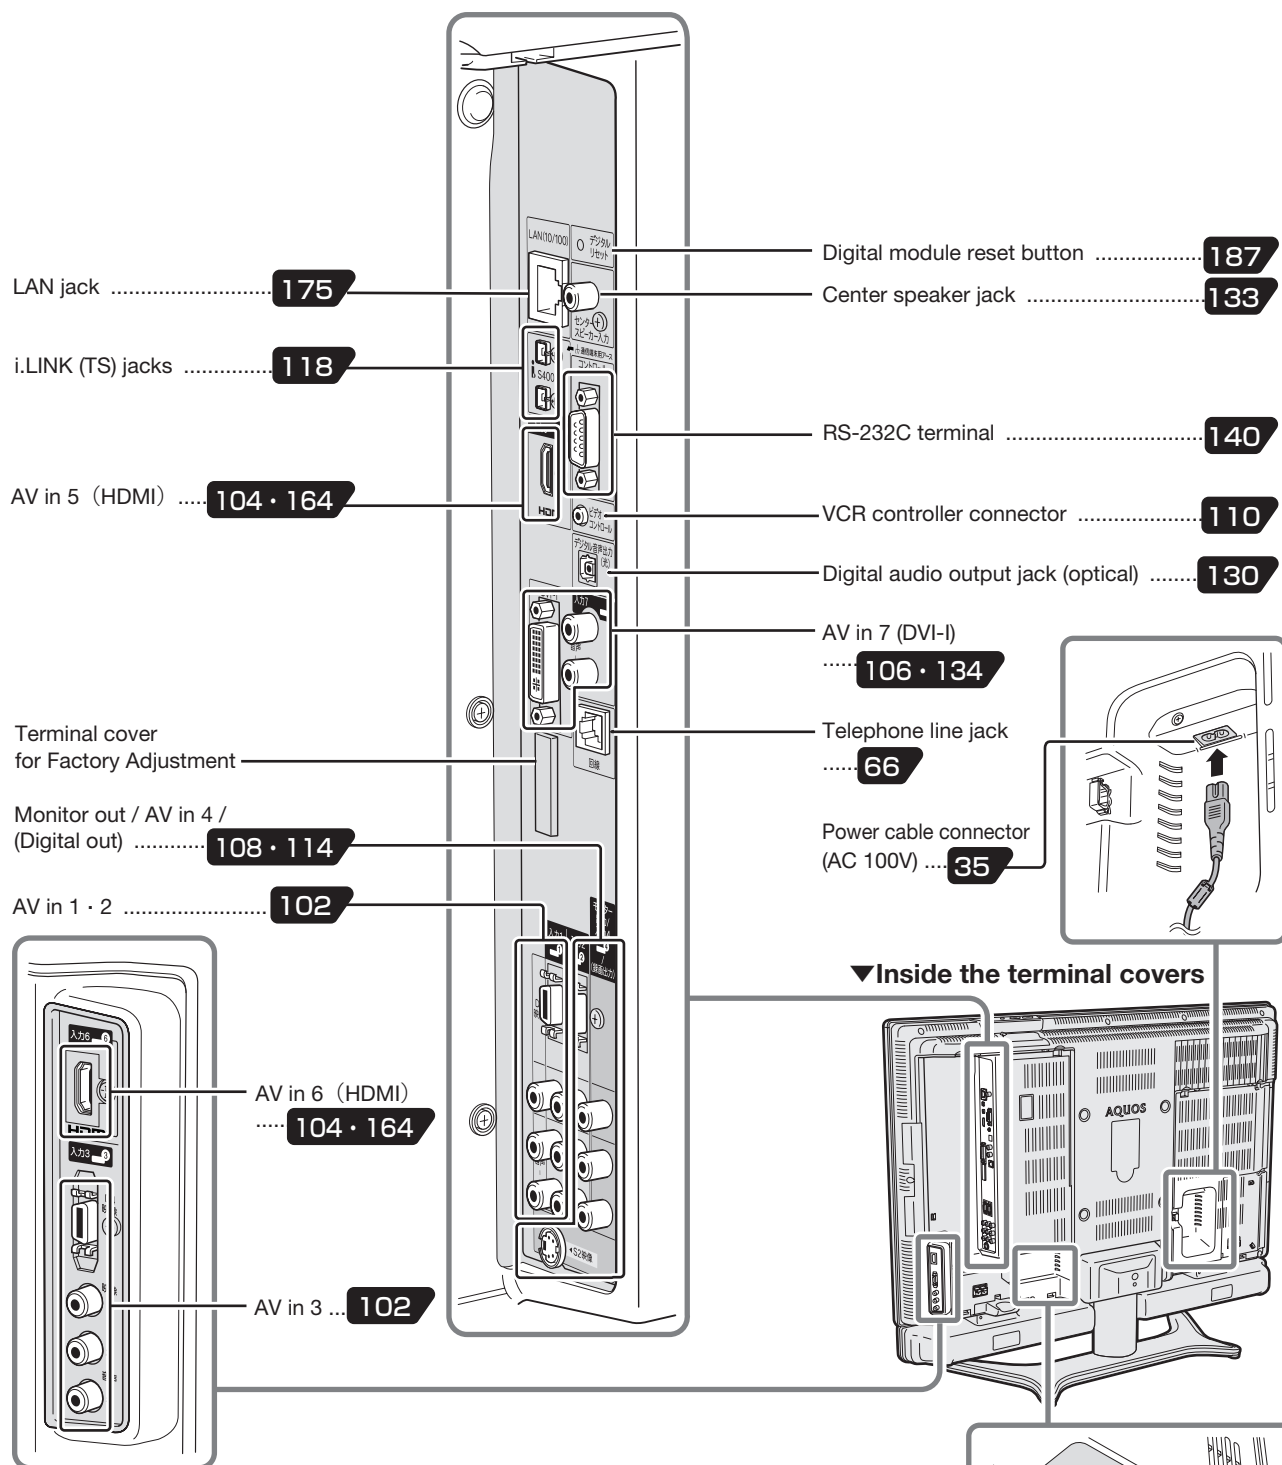

## Opening the terminal covers

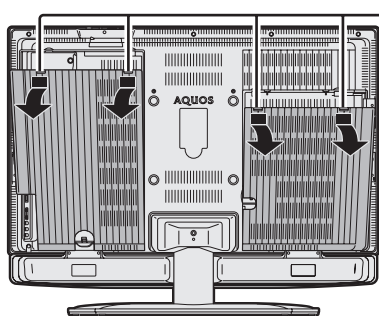


Holding the lock at the top of the cover downward, pull the cover off the back of the main unit.

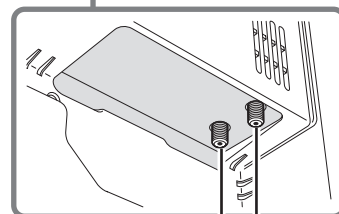

# Part Names – Remote Control Unit

## Cover closed

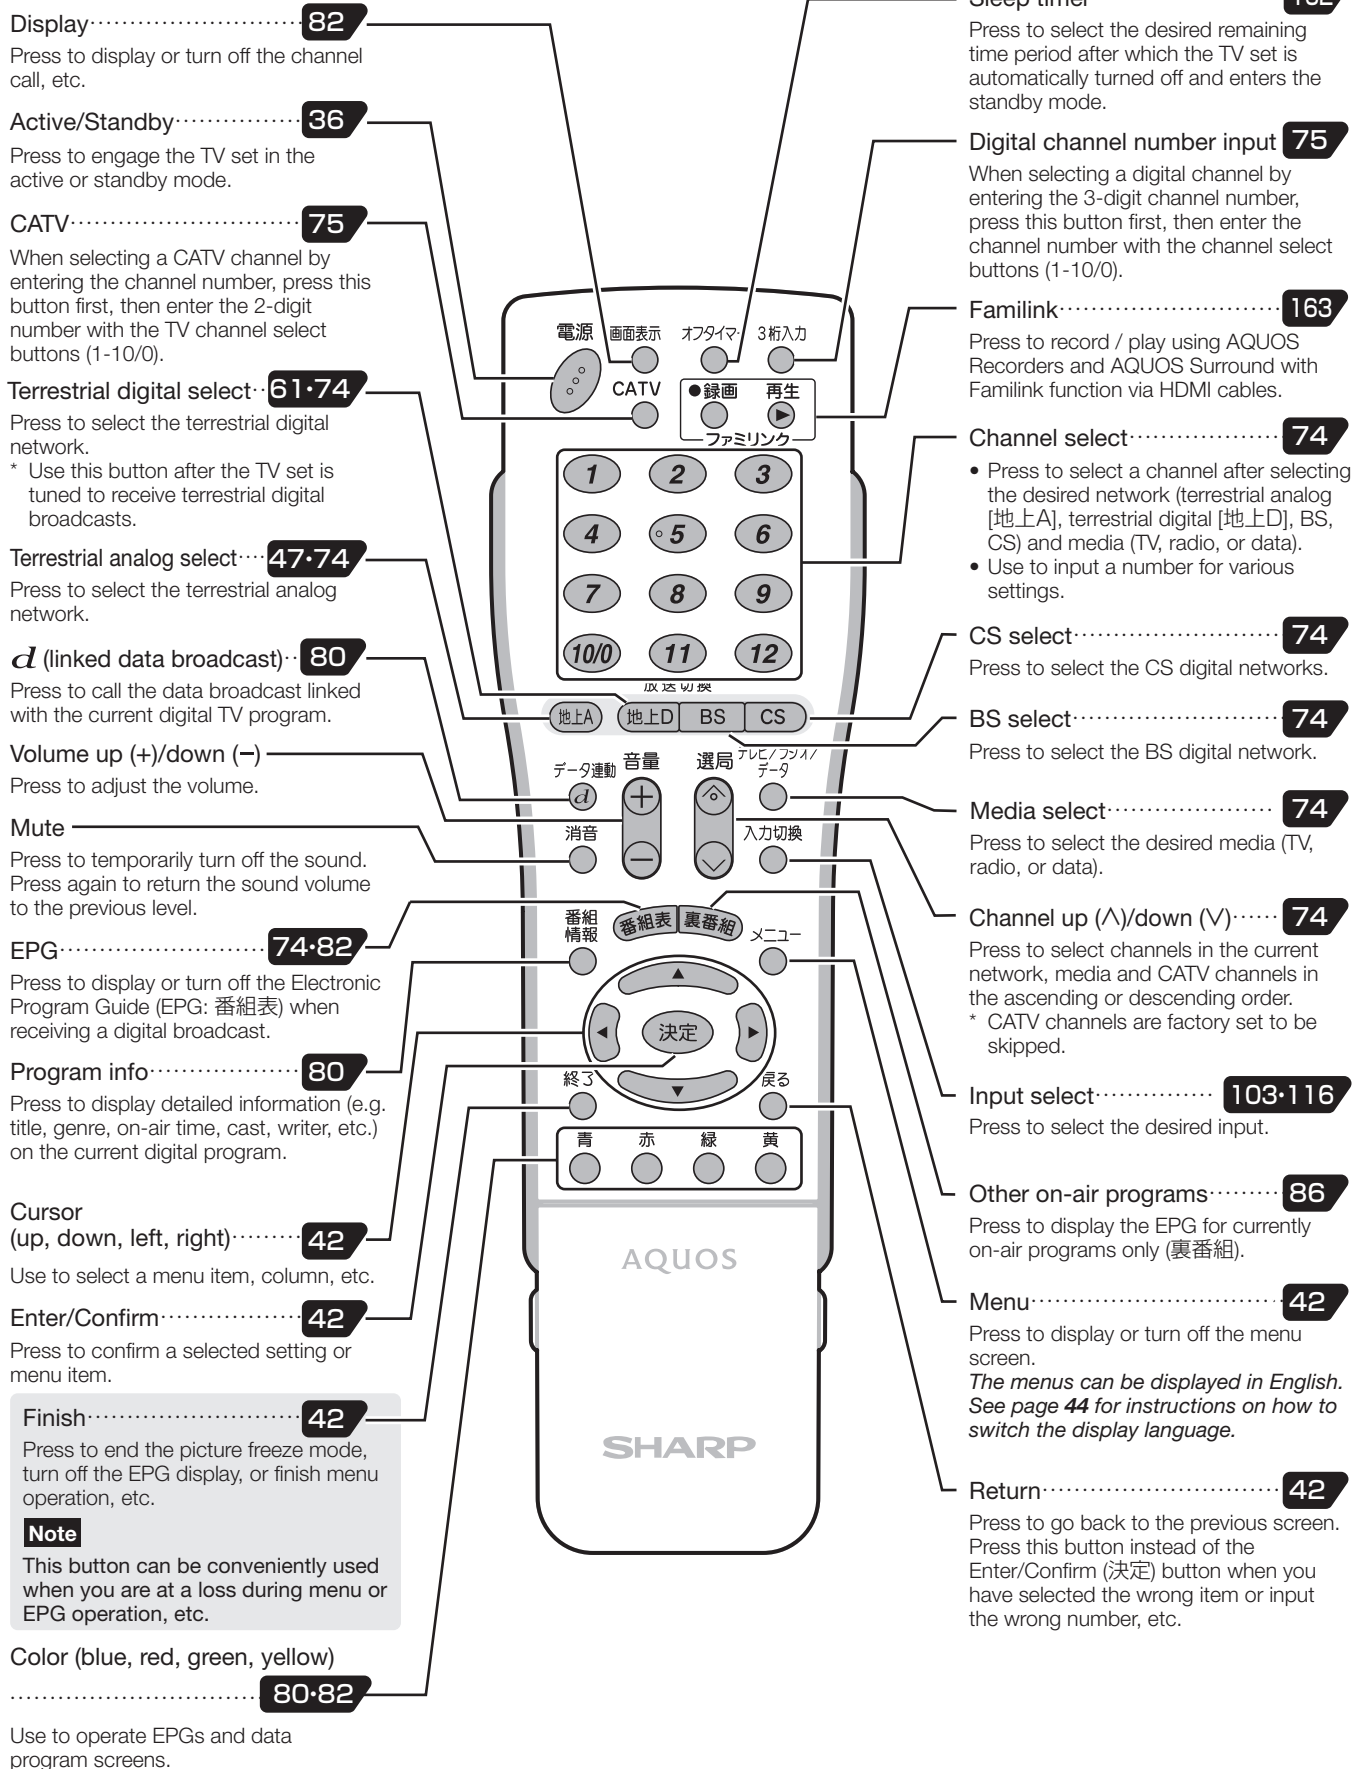

## Cover open

**Picture select**..... **79**  
Press to select the desired picture when watching a digital multi-picture program.

**Screen mode**..... **136·145**  
Press to select the desired screen mode.

**Freeze**..... **159**  
Press to freeze the picture.

**AV mode select**..... **149**  
Press to select the picture/sound setting (dynamic [locked], dynamic, standard, cinema, game, or AV memory) that best matches the current program.

**i.LINK**..... **119·122**  
Press to select the i.LINK mode. Press to display or turn off the D-VHS VCR, AV-HDD recorder, Blu-ray Disc recorder or Hi-Vision Video camera control panel.

**Favorite channel select/register**..... **75·160**  
Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

**Familink**..... **163**  
Press to operate AQUOS Recorders and AQUOS Surround with Familink function via HDMI cables.

**Caption**..... **171**  
Press to display, select, or turn off captions when watching a digital program with captions.


**Audio select**..... **79·154**  
Press to select the desired audio (e.g. Japanese or English in bilingual broadcast, the main sound or a sub sound in digital multi-sound broadcast, etc.).

**Operable screen**..... **158**  
Press to switch the operable screen (screen with the ♪ mark) when the TV set is in the split screen mode.


**Split screen**..... **158**  
Press to switch between the split screen mode and the normal screen mode.

### To open the cover

Hold the cover by the projections on both sides and lift upwards.

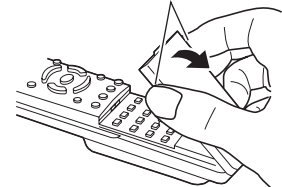

## Basic operation for channel selection

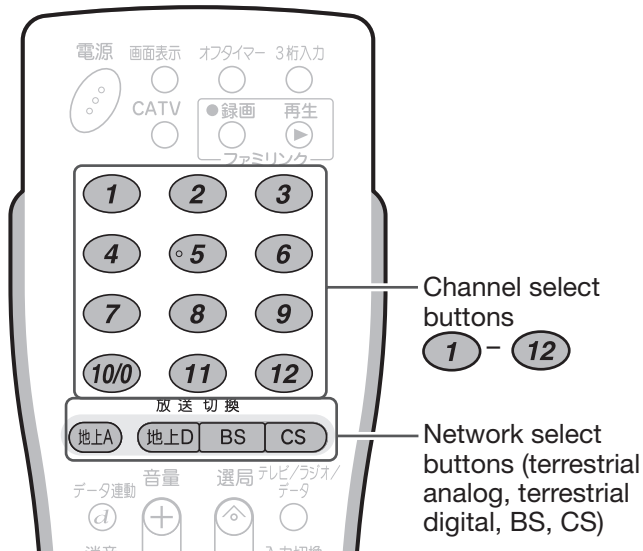

### Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **1** - **12** to select the desired channel.

### Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **1** - **12** to select the desired channel.

#### Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

■ For details about channel selection, see page 74.

### Selecting favorite channels

- ① Press **お好み選局** to display the registered channel screen.
- ② Press **1** - **12** to select the desired channel.